
## Measuring guide Pull down window screen

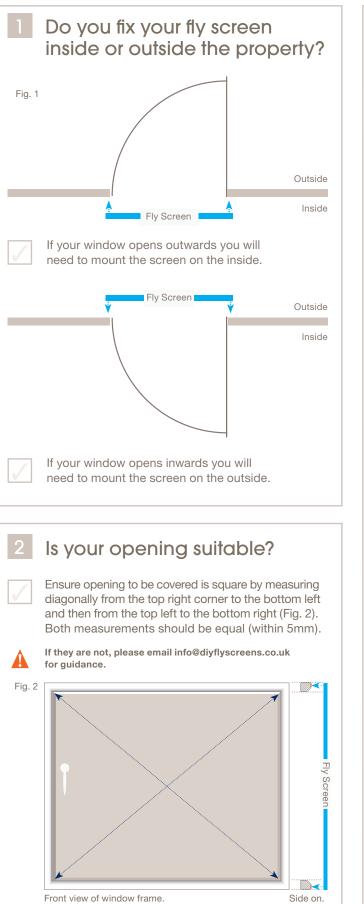





## **Is your window frame suitable?** Ensure you have a frame all the way around your

Ensure you nave a frame all the way around your window (Fig. 3/3b).

Ensure the surface you are fitting the screen to is flat, smooth and clear of any obstruction.

Ensure you have at least 10mm of flat surface on the outside edge of the frame for the adhesive strip (Fig. 4). This does not include the bevelled area (Fig. 5).

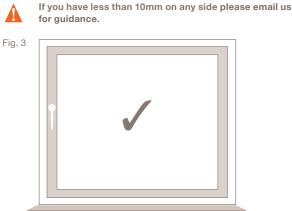

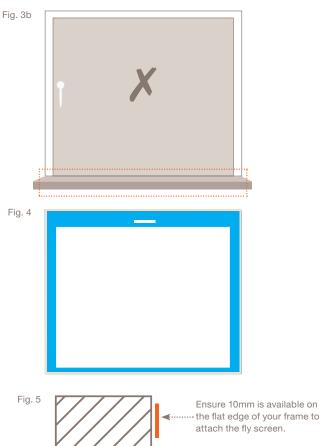

 Bevelled edge. Screen does not fit to this part.

