


Measuring guide

Screen door – single

1 Do you fix your fly screen inside or outside the property?

If your door opens inwards you will need to mount the screen on the outside.

Fig. 1

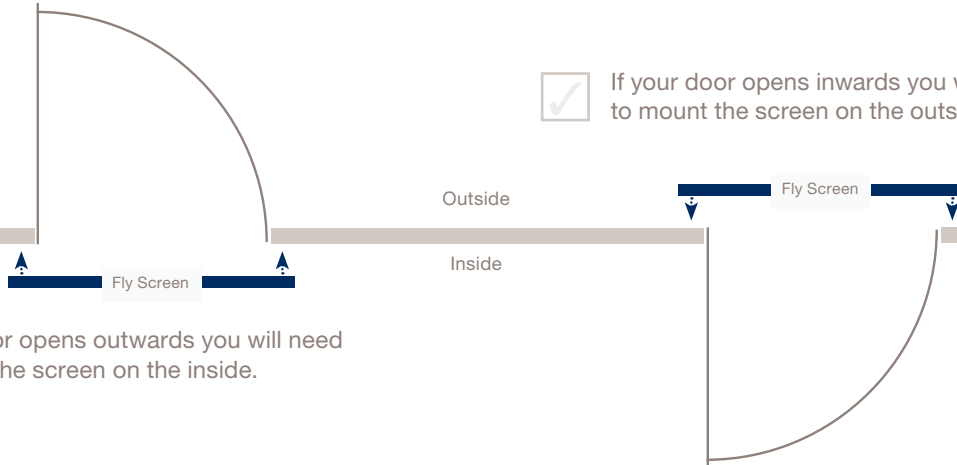


If your door opens outwards you will need to mount the screen on the inside.

2 Is your door opening suitable?

Ensure opening to be covered is square by measuring diagonally from the top right corner to the bottom left and then from the top left to the bottom right (Fig. 2). These two measurements should be equal (within 5mm).

! If they are not, please email info@phantom-screens.co.uk for guidance.

Fig. 2

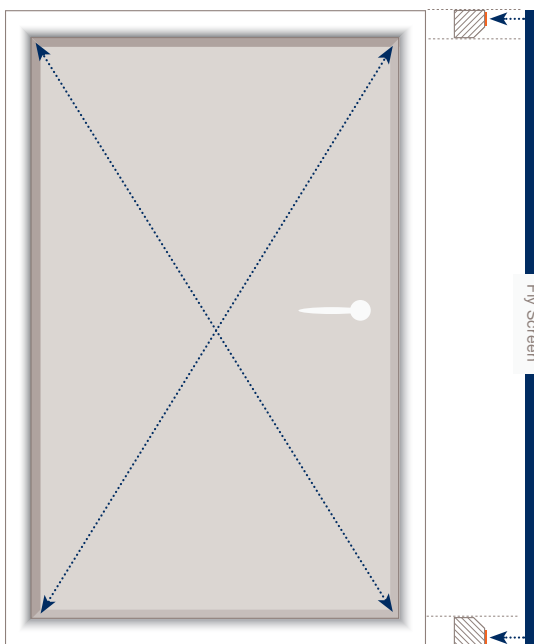

Front view of door frame.

Side on.

3 Is your door frame suitable?

Ensure you have a frame all the way around your door (Fig. 3/3b).

Ensure the surface you are fitting the screen to is flat, smooth and clear of any obstruction.

Ensure you have at least 10mm of flat surface on the outside edge of the frame for the adhesive strip (Fig. 4). This does not include the bevelled area (Fig. 5).

! If you have less than 10mm on any side please email us for guidance.

Fig. 3

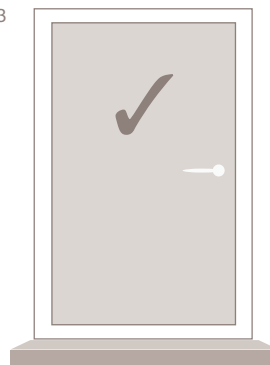


Fig. 3b



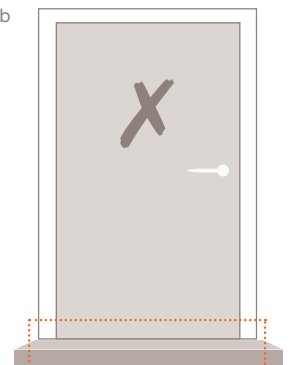


Fig. 4



Ensure 10mm is available on the flat edge of your frame to attach the fly screen.

Fig. 5

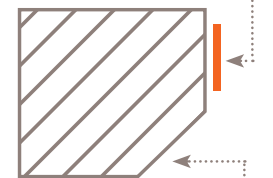


Bevelled edge. Screen does not fit to this part.

4 Will your screen 'overlap'?

DIY Fly Screen Dimensions (Fig 6).	mm
Width top/bottom (a)	36
Retractable side & slide bar (b)	78
Opposite side (c)	27

- If your door frame is thinner than the fly screen on any of the four sides, the fly screen will overlap your opening slightly.
- As long as you have 10mm of sticking surface your screen will still function correctly.

Fig. 6

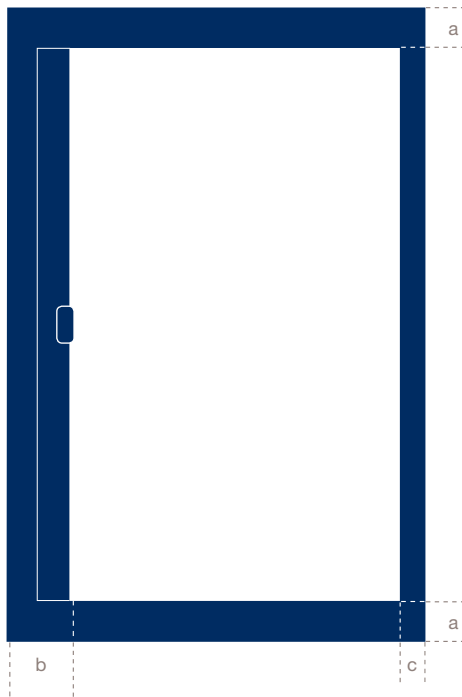


5 Check for obstructions

- We recommend that you mount the fly screen with the retractable housing on the hinged side of your frame to avoid obstructions.
- Ensure that your door frame is free of any obstructions such as door bells (Fig. 7) so that you have a clean area to fix the fly screen to.

! If you have an obstruction which cannot be easily removed or worked around, please email for guidance.

Examples of typical obstructions:

Fig. 7

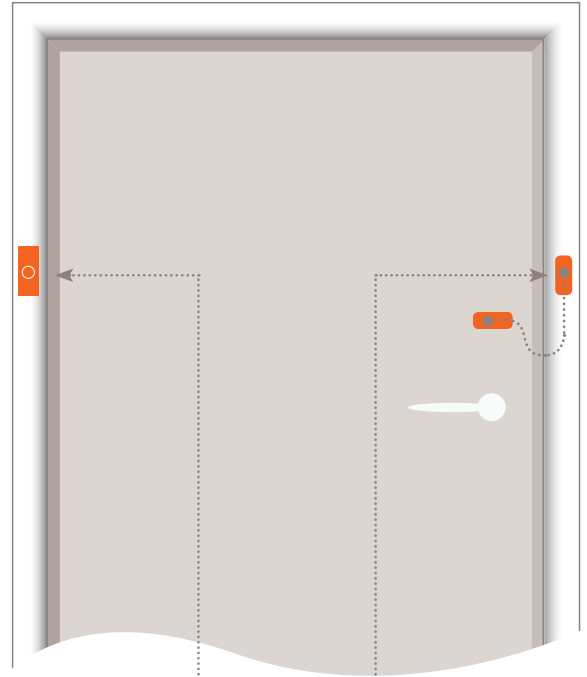


Door bell fixed to frame within 10mm area.

Security chain fixed to frame within 10mm area.

6 Measure your screen size

- Measure from where you want the outer edge of the fly screen to sit. Typically this is the outer edge of your door frame (Fig. 8). Your width (x) and height (y) will be equal to the total width and height of your fly screen frame.

Fig. 8

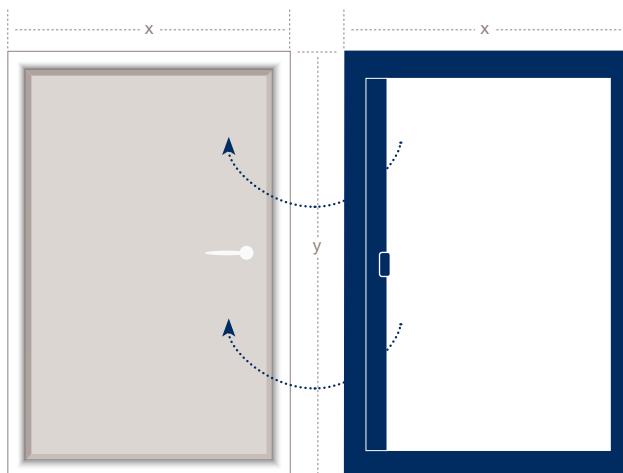


Door frame.


DIY fly screen.

Measurements	mm
Height (y)	
Width (x)	

! Please take care when providing us with your measurements as we cannot accept returns of made-to-measure products.

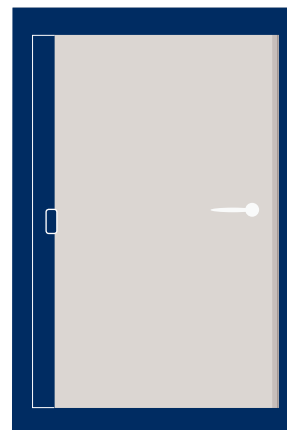

Screen fits securely to frame.

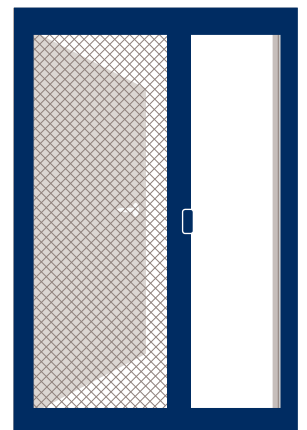

Screen closes when door open.