


Measuring guide


Screen door – double

1 Do you fix your fly screen inside or outside the property?

Fig. 1

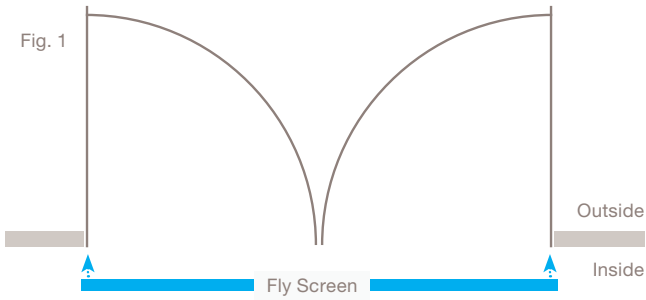

- If your doors open outwards you will need to mount the screen on the inside.

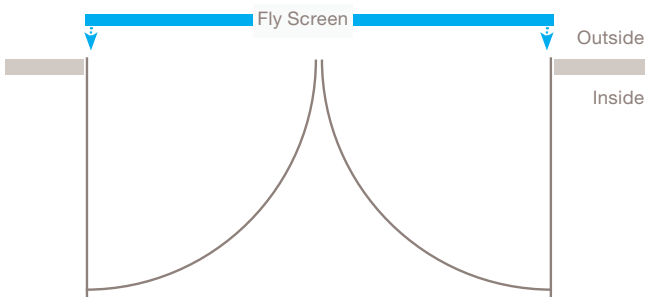


- If your doors open inwards you will need to mount the screen on the outside.

2 Is your door opening suitable?

- Ensure opening to be covered is square by measuring diagonally from the top right corner to the bottom left and then from the top left to the bottom right (Fig. 2). Both measurements should be equal (within 5mm).

! If they are not, please email info@diyflyscreens.co.uk for guidance.

Fig. 2

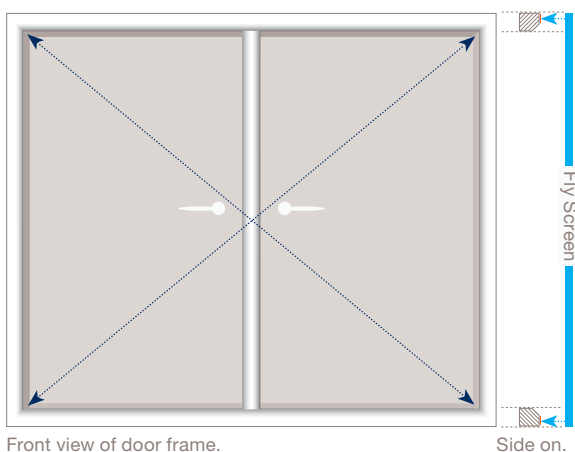

3 Is your door frame suitable?

- Ensure you have a frame all the way around your doors (Fig. 3/3b).
- Ensure the surface you are fitting the screen to is flat, smooth and clear of any obstruction.
- Ensure you have at least 10mm of flat surface on the outside edge of the frame for the adhesive strip (Fig. 4). This does not include the bevelled area (Fig. 5).

! If you have less than 10mm on any side please email us for guidance.

Fig. 3

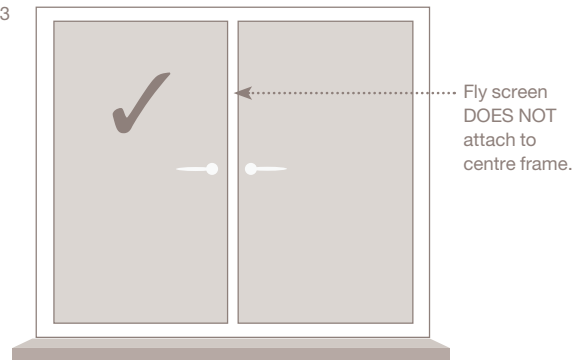


Fig. 3b

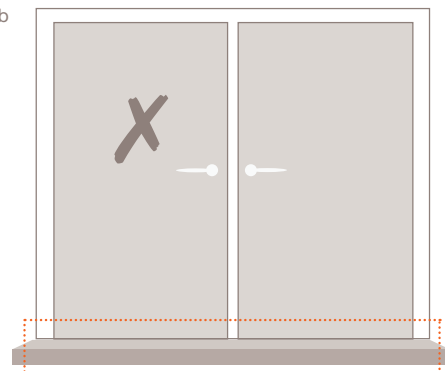


Fig. 4





Fig. 5

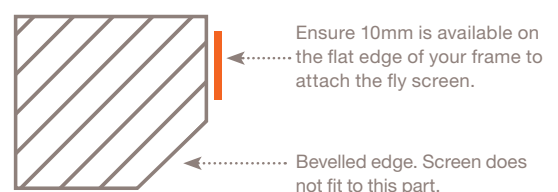

4 Will your screen 'overlap'?

Fly Screen Dimensions (Fig 6).	Width (mm)	Depth (mm)
Width top/bottom (a)	36	25
Retractable sides & slide bars (b)	78	40

- If your door frame is thinner than the fly screen on any of the four sides, the fly screen will overlap your opening slightly.
- As long as you have 10mm of sticking surface your screen will still function correctly.

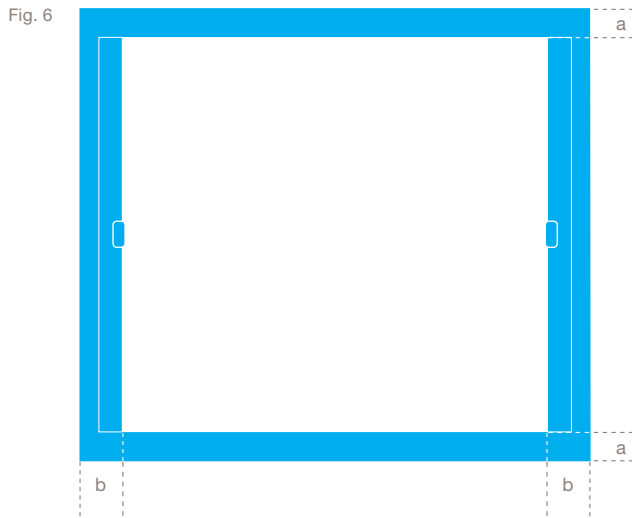


Fig. 6

5 Check for obstructions

- Ensure that your door frame is free of any obstructions such as trickle vents (Fig. 7) so that you have a clean area to fix the fly screen to.

! If you have an obstruction which cannot be easily removed or worked around, please email for guidance.

Examples of typical obstructions:

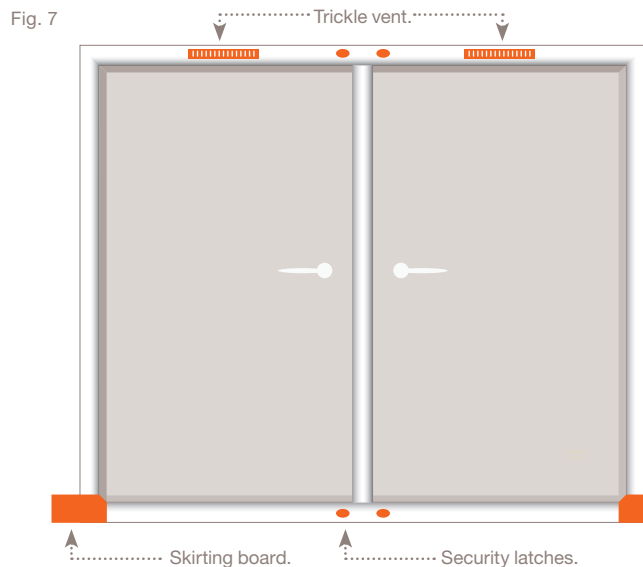


Fig. 7

6 Measure your screen size

- Measure from where you want the outer edge of the fly screen to sit. Typically this is the outer edge of your door frame (Fig. 8). Your width (x) and height (y) will be equal to the total width and height of your fly screen frame.



Please take care when providing us with your measurements as we cannot accept returns of made-to-measure products.

Measurements	mm
Height (y)	
Width (x)	


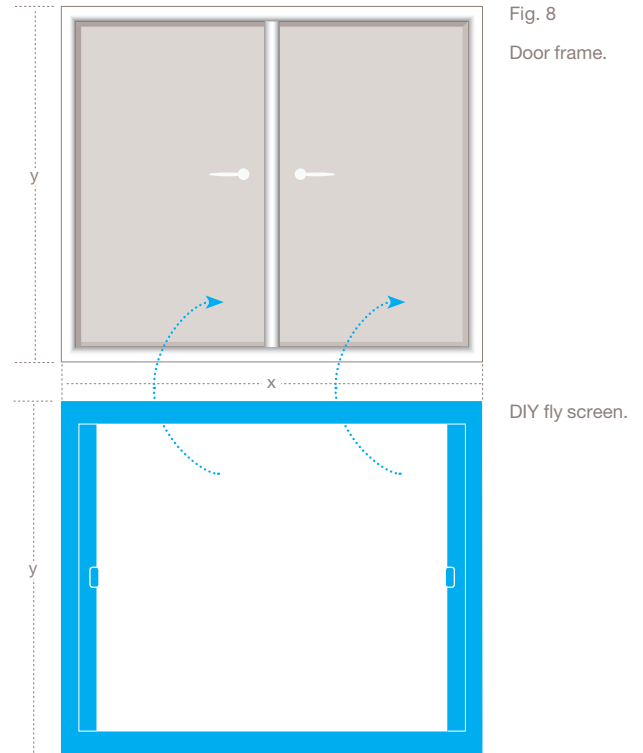



Fig. 8

Door frame.

DIY fly screen.

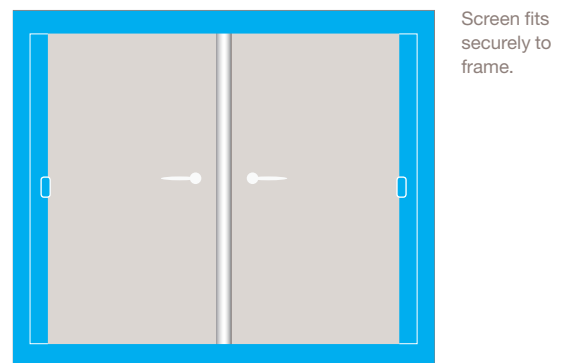

Screen fits securely to frame.

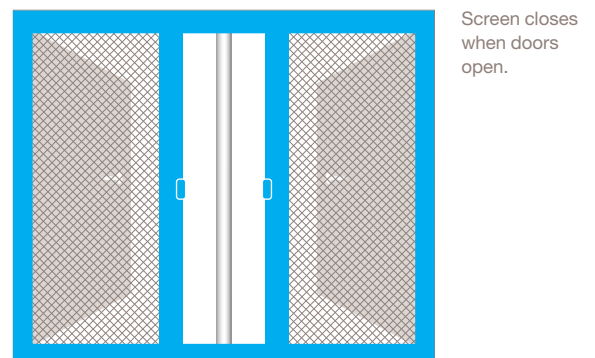

Screen closes when doors open.